


# KIKGARD – **New Door** Installation Instruction Pictures



Step #1

Mortise is always **1/2 inch** in width

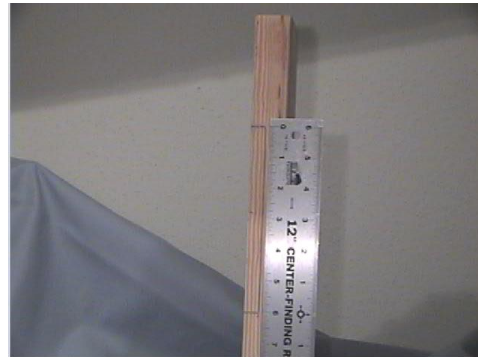


Step #2

(\* Mortise is always **6 inches** length **plus** allowance for the size router bit bearing used.




Step #3

Depth of mortise is always **1/16 inch**

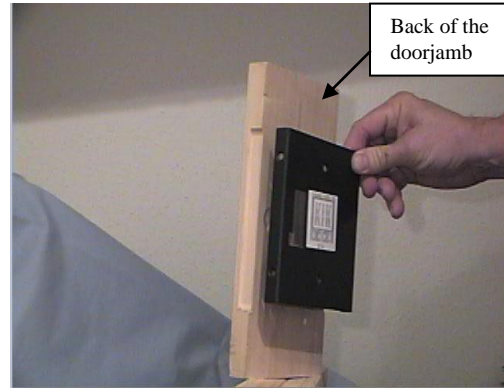

Step #4

Back screws are mainly for ease of installation during assembly..

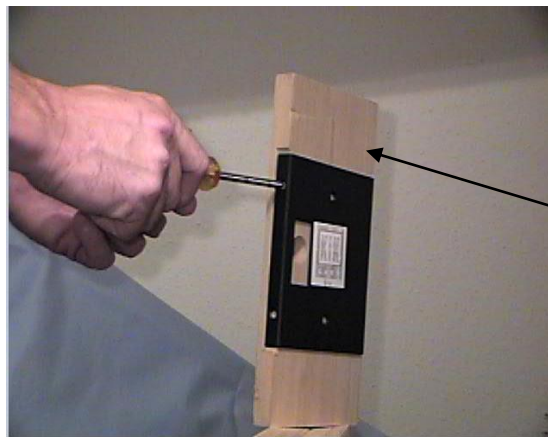

This section of the door jamb will be facing the wall studs, **making the KIKGARD invisible** once installed with casing [trim] attached.

Step #5

Drill a hole in the new door jamb where the dead bolt lock throw will enter per lock installation instructions. **Mark the location where the KIKGARD Shield will be installed by centering the hole drilled in the new door jamb for the dead bolt lock throw with the rectangular hole on the KIKGARD.**

1. Mark two lines **1/2 "** in length along the side edges of the new jamb as shown. Repeat on the other side.
2. Mark a second line (**\* see above**) **6 "** long connecting the two **1/2 "** lines as shown. Repeat on the other side.
3. Using your router, **mortise** or **remove the wood** in the area within the lines drawn on both sides of the jamb as shown. **Depending on the thickness of the door jamb, there will be approximately 3/16 inch to 1/4 inch of wood left for the reveal.**
4. Attach the **KIKGARD** to the back of the new door jamb with the flanges facing toward the door. **The mortised design allows the two side flanges to fit flush with the new door jamb edges for maximum strength.**
5. Pre-drill screw holes and attach the **KIKGARD** on each **side** flange with provided screws.